Still need help?



SCAN FOR VIDEO INSTRUCTIONS

SUPPORT

hello@getoffroam.com

415 - 592 - 7626

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam, shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not

 
cover the installation, removal or re-installation of any product.

WARNINGS

Do not mount accessories in front of or near the path of airbag deployment.


Mount electronics away from air flow to prevent heat damage.

- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents, Not compatibile with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.





Using the L-key provided, loosen the clamping screw to create at least 3mm (1/8") gap between the front & the backing plates of the clamp. Keep screw threaded into the backing plate.

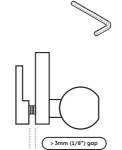



Open the vehicle air vent louver to full air flow position. Place the clamp through

the lip of the air vent. Move the clamp as close as possible to the outer edge where the lip is stiffer (shown in image).





Hold the clamp in place against the air vent lip.

Tighten screw until clamp has a snug fit around the lip.



Fitment Note

Fits OEM center vents only. Remember to position as close as possible to the outer edge of lip.

