



COMPONENTS

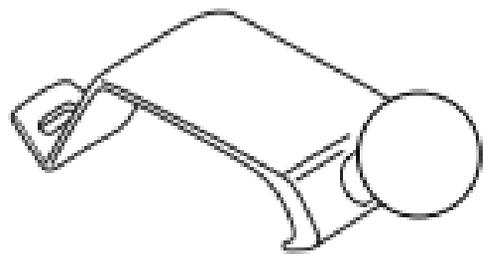

Clamp

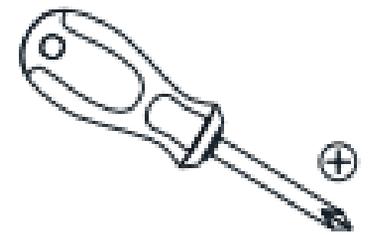


Philips-Head Screwdriver
(NOT INCLUDED)

01

Remove the rubber tray insert inside the mounting area of the dash.

Once removed, two screws will be exposed - those are your two mounting options.

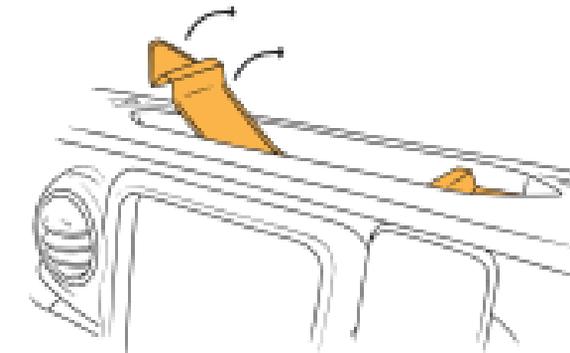



AREA WITH RUBBER TRAY INSERT REMOVED



02

Using a standard Philips-Head screwdriver, fully remove your desired screw.


Place Dash Mount in position.

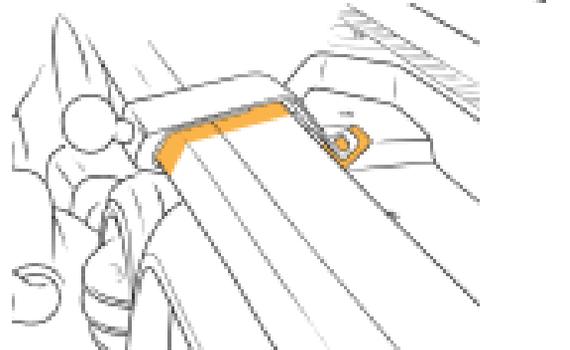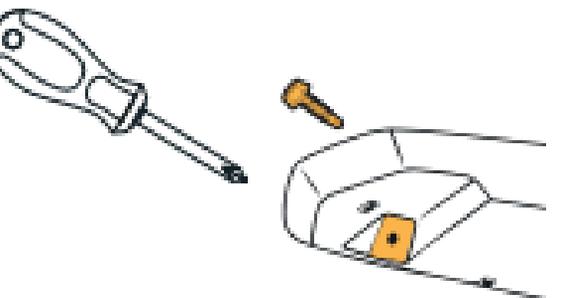

03


Once Dash Mount is in position, place the removed screw back in the threaded hole.

Tighten screw until Dash Mount has a snug fit around dash.

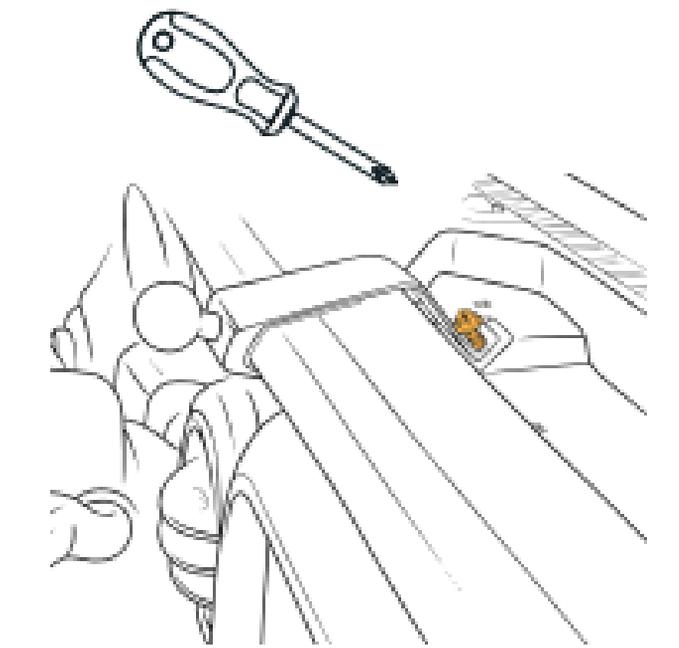

OPTIONAL

Trim rubber tray insert and re-install to give a clean OEM appearance.

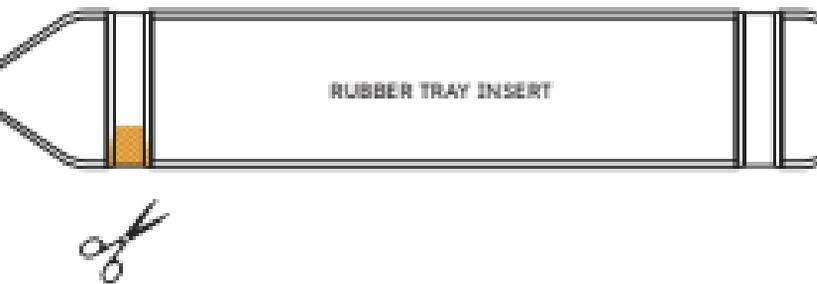

Still need help?



SCAN FOR VIDEO INSTRUCTIONS

SUPPORT

hello@getoffroam.com


415 - 592 - 7626

OFFROAMTM
offroam.com

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents. Not compatible with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

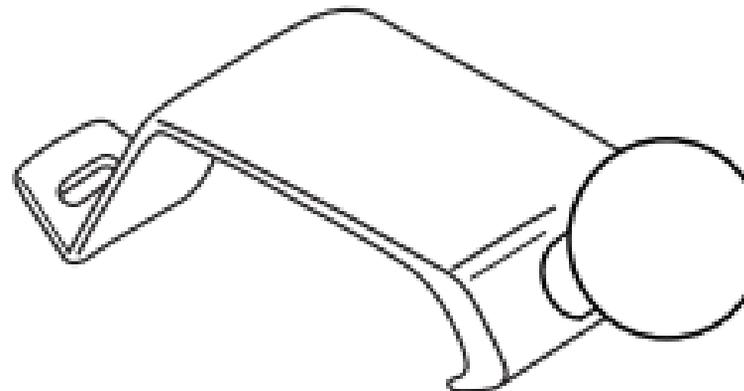

Dash Mount Installation Instructions

for 2018-2023 Jeep Wrangler & Gladiator