


OFFROAM

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

COMPONENTS

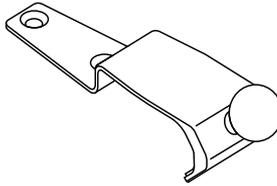


Mounting Base



M5 x 10mm (x2)



Phillips Screwdriver
(not included)

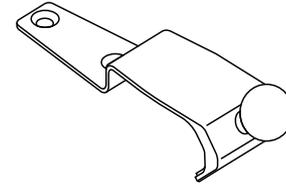


Mounting Base Installation

Jeep Wrangler | Gladiator 2024-2026

01

Remove rubber insert on either driver or passenger side of the upper dash tray.

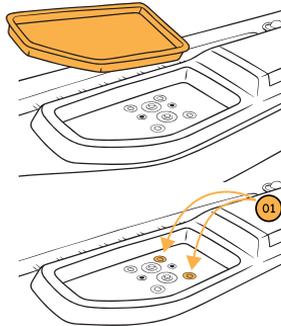


Mounting base mounts to the threaded holes closest to the dash center (01)

02

Hook the front of the mounting base around the dash lip (01)

Align upper base to holes (02)

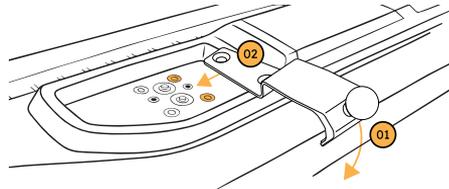


03

Hand thread the provided screws into the holes.


Tighten screws with a Phillips screwdriver, hand tighten only.

Do not use power tools when tightening screws.

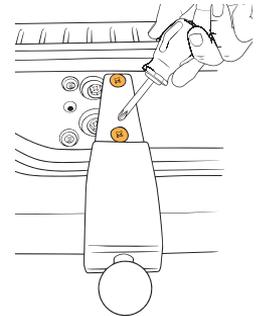

POSITIONING

Fits driver or passenger side upper dash tray area. Optional: reinstall rubber inserts into upper dash tray.

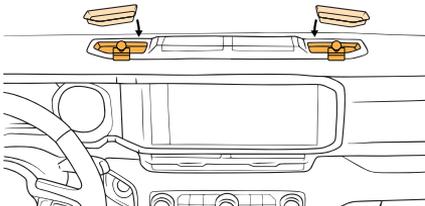

WATCH THIS INSTALL

