

Watch This Install



SUPPORT

hello@getoffroam.com


415 - 592 - 7626

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

COMPONENTS

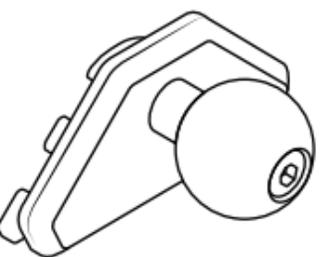

Mounting Base





L-key

01

Using the L-key provided, slightly loosen the screw to ensure the rear plate moves.


Do not fully remove the screw - keep about one thread engaged.

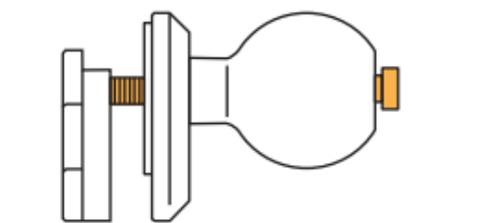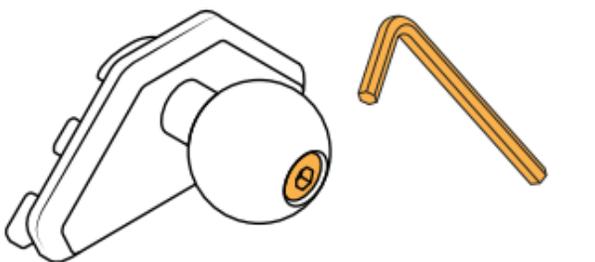

>3mm (1/8") GAP

02


Place the mounting base in the upper outer corner of either the driver or passenger side center console air vents.

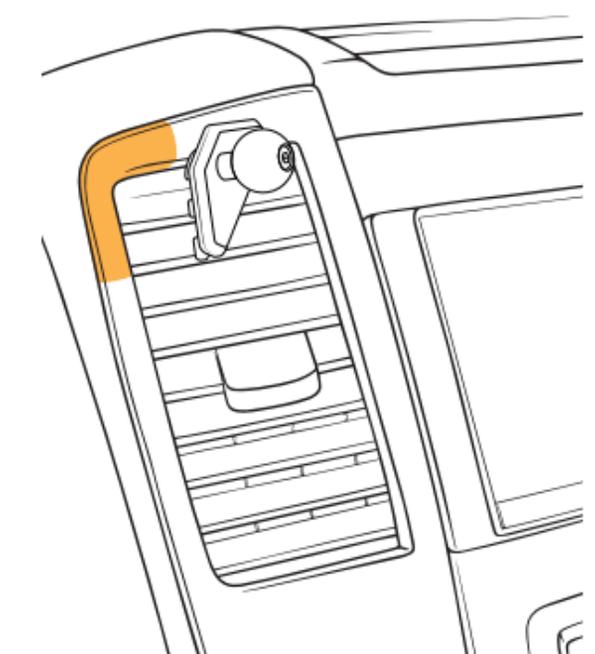

03


Tighten screw until the mounting base has a secure fit to the air vent bezel.


To ensure best fit, hold mounting base with opposite hand while tightening.

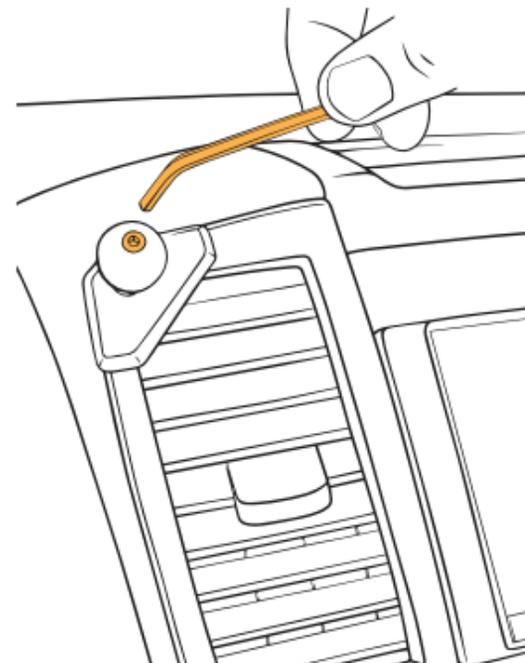

POSITIONING

Fits on the upper outer corner of either the driver or passenger side air vents on center console.

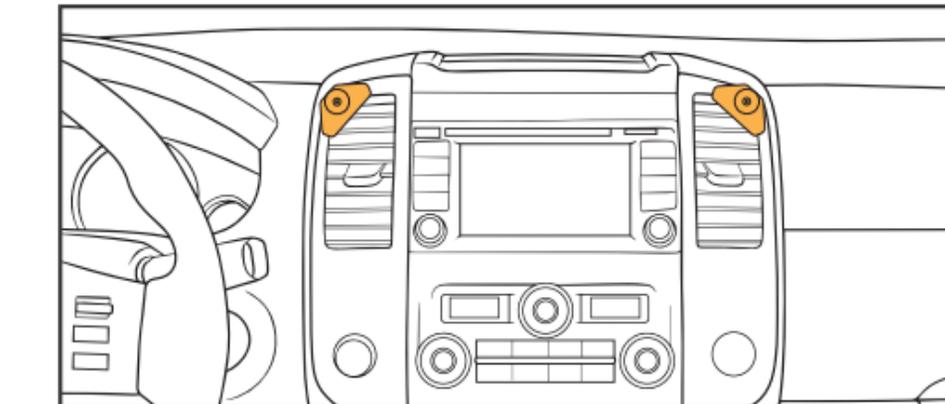

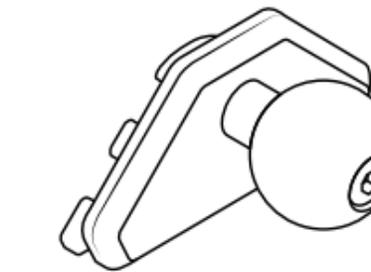

Mounting Base Installation Instructions

Nissan Frontier 2013-2021
Nissan Xterra 2009-2015