

Still need help?



SCAN FOR VIDEO INSTRUCTIONS

SUPPORT

hello@getoffroam.com


415 - 592 - 7626

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.


WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents. Not compatible with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.
- Mount electronics away from air flow to prevent heat damage.

COMPONENTS

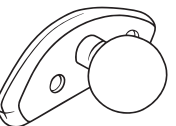

Clamp




L-key

01

Using the L-key provided, slightly loosen the screws to ensure the backing plate moves.

Do not fully remove the screws - keep about one thread engaged.

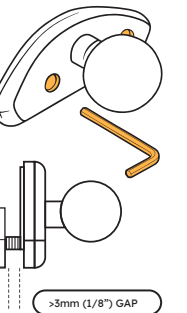

02

Place the clamp in the upper outer corner of the left or right center air vent.


*See "Fitment Note" section of the instructions if further clarification is needed.



03


Alternate tightening screws until clamp has a snug fit around air vent bezel.

To ensure the best fitment possible, hold clamp with hand while tightening.

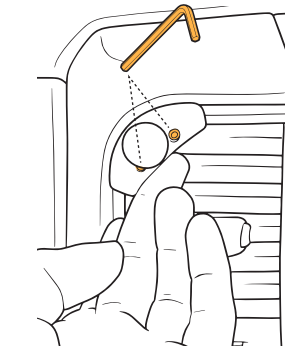


FITMENT NOTE

Clamp fits upper outer corners of the center air vents on dash.

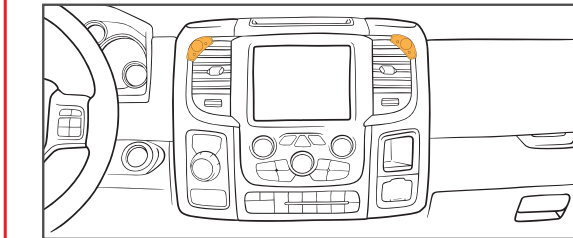



offroam.com

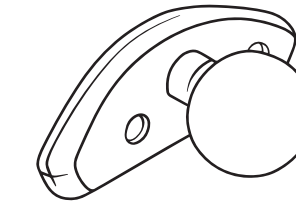

Clamp Installation Instructions

for Ram 1500/2500/3500 2014-2018