


# OFFROAM

## WARNINGS


- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before instal to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroad shall have no liability for damage or injury resulting from the installation or use of any Offroad or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroad product warranties do not cover the installation, removal or re-installation of any product.


## COMPONENTS

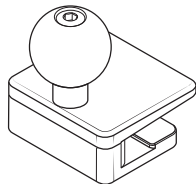

Mounting Base

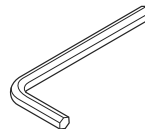

L-key

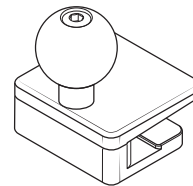


## Mounting Base Installation

Toyota 4Runner 2010-2024

01

Using the L-key provided, slightly loosen the screw to ensure the inner plate moves.

Do not fully remove the screw - keep about one thread engaged.

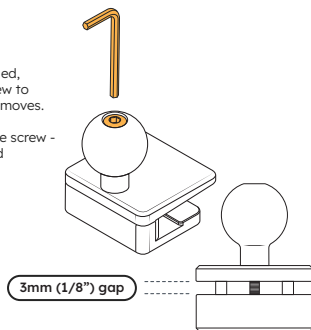


02

Open the vehicle air vent lower to full air flow position.

Place the mounting base through the lip of the air vent.


Move the mounting base as close as possible to the outer edge where the lip is stiffer, as shown in yellow.

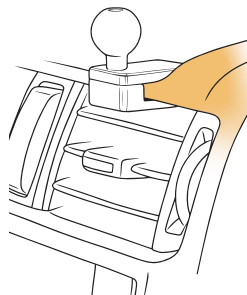

03


Using the L-key, tighten screw until mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening.

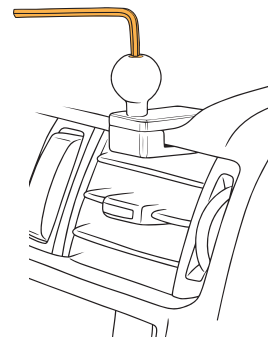

## POSITIONING

Fits in the positions shown. Keep close to outer, stiffer lip edges.

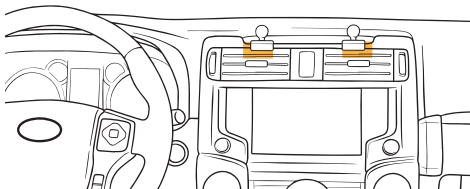

WATCH THIS INSTALL

