Still need help?



SUPPORT

hello@getoffroam.com

SCAN FOR VIDEO INSTRUCTIONS

415 - 592 - 7626


Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroam, shall have no liability for damage or injury resulting from the installation or use of any Offroam or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroam product warranties do not cover the installation, removal or re-installation of any product.

WARNINGS

Do not mount accessories in front of or near the path of airbag deployment.

Mount electronics away from air flow to prevent heat damage.


- Check vehicle compatibility before installation to avoid damage to air vent bezel.
- Designed to work with OEM air vents, Not compatibile with aftermarket air vent modifications.
- Do not mount heavy devices and/or use with long extension arms. Check the rated weight limit.





Using the L-key provided, slightly loosen the two screws on the bottom of the clamp.

Do not fully remove the screws - keep a few threads engaged.

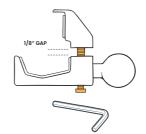




Clamp is designed to fit into the seam between the nav unit and the bezel.

Gentle push lip into position.

*See "Fitment Note" section of the instructions for more details.

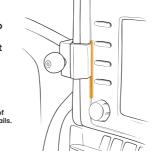



Hold the clamp in position while tightening screws.

Alternate tightening 5-6 times until both screws are equally snug.



Clamp is designed to fit from the mid-section of the screen to the very bottom. For best results, mount towards the bottom.

