


# OFFROAD

## COMPONENTS


### WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.


Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroad shall have no liability for damage or injury resulting from the installation or use of any Offroad or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroad product warranties do not cover the installation, removal or re-installation of any product.

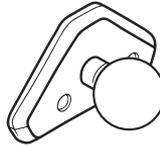

Mounting Base

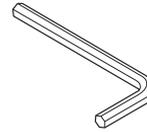

L-key

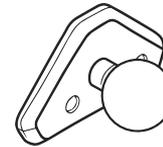


## Mounting Base Installation

Toyota Tacoma 2012-2015

01

Using the L-key provided, slightly loosen the screws to ensure the inner plate moves.


Do not fully remove the screws - keep about one thread engaged.

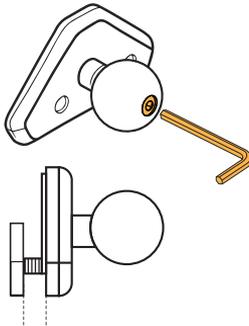

02


Open the vehicle air vent lower to full air flow position.

Place the rear mounting base plate behind the centre area of the top vent bezel and then slide it into the corner as shown.

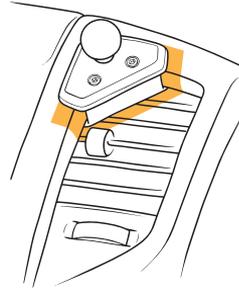


03

Hold the mounting base in place, and using the L-key alternately hand tighten to a snug fit.

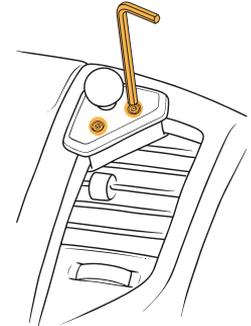

## POSITIONING

Fits both upper inner corner console air vents as shown.

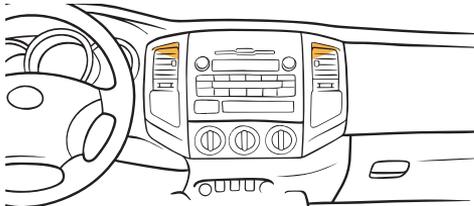

WATCH THIS INSTALL

