

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.

Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.



Mounting Base Installation Instructions

Toyota Tacoma 2016 -2023
Toyota Tundra 2014-2021

COMPONENTS



Mounting Base





L-key

01

Using the L-key provided, slightly loosen the screw to ensure the inner plate moves.

Do not fully remove the screw - keep about one thread engaged.

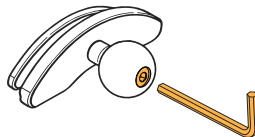


> 3mm (1/8") gap

02

Open the air vent louvers to full air flow position.

Place the mounting base through the larger opening between louvers and bezel.

Rotate mounting base to aim air vent to desired position.

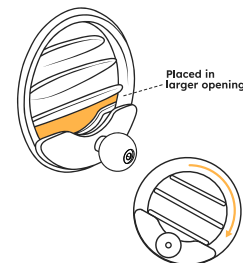


Note: Clamp will lock the airvent aim

03


Using the L-key, tighten screw until mounting base has a snug fit.

To ensure the best fit possible, hold mounting base while tightening

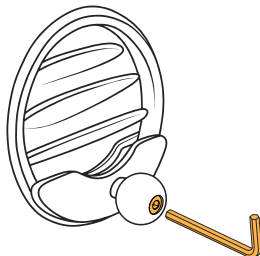

POSITIONING

Fits front four air vents on dash. This product does not block air flow, but locks the air vent aim.

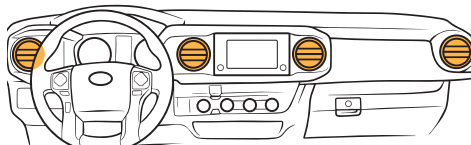

WATCH THIS INSTALL

