


OFFROOM

COMPONENTS

WARNINGS

- Do not mount accessories in front of or near the path of airbag deployment.
- Check vehicle compatibility before install to avoid damage to the vehicle mount point.
- Designed to work with OEM dashboard only, not compatible with aftermarket modifications.
- Do not use with 3rd party extension arms. Adhere to our phone weight limits.
- Mount electronics away from airflow to prevent heat damage.


Self-installation instructions and advice are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. Offroom shall have no liability for damage or injury resulting from the installation or use of any Offroom or third party products. It is your responsibility to ensure that all products are installed in adherence with local laws and regulations and in such a manner as to allow a vehicle to be operated safely and without distraction. Offroom product warranties do not cover the installation, removal or re-installation of any product.

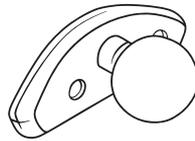


Mounting Base



Trim Tool



L-key

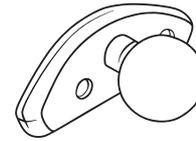


Mounting Base Installation

Ram 1500/2500/3500 2013-2018
Ram Classic 2019-2024

01

Using the L-key provided, slightly loosen the screws to ensure the rear plate moves.

Do not fully remove the screws - keep about one thread engaged.

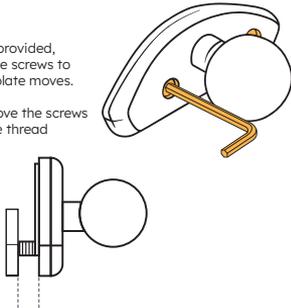


02

Open the vehicle air vent lower to full air flow position.

Place the mounting base in the upper outer corner of either the driver or passenger side center console air vents.


Ensure the rear mounting base plate is positioned behind the air vent bezel.

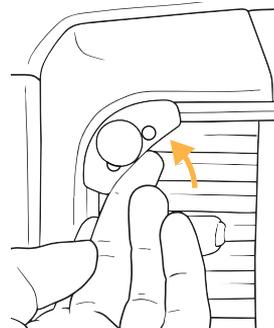

03

Alternately tighten screws until the mounting base has a snug fit.

To ensure best fit, hold mounting base with opposite hand while tightening.

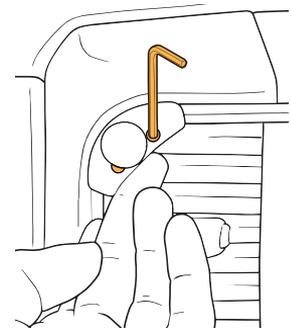

POSITIONING

Fits on either side of the center console as shown.



WATCH THIS INSTALL

